



# PROFESSIONAL HAIR CLIPPER

User Manual

RN-8650



## Components name

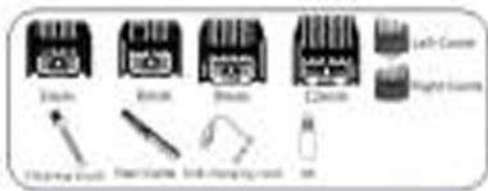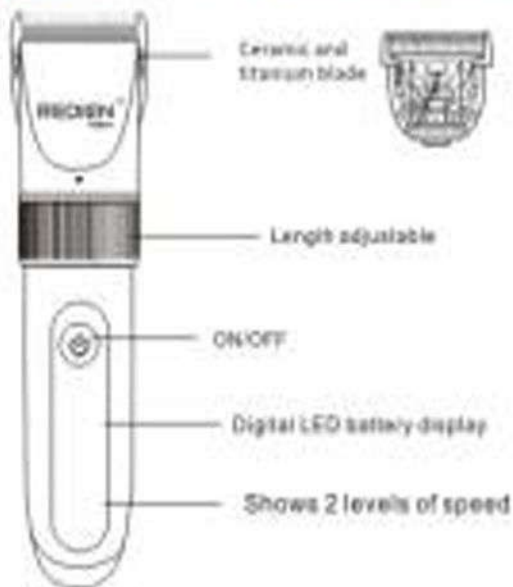

## Blade disassembly & assembly

### Blade disassembly



- Push down the eVA handle blade with your thumb. Always use care
- Please catch the disassembled blade with your other hand in case the blade drops.

### Blade assembly



- Put the blade in the handle
- Push down the blade until you feel a big bump (lock the clip)



Remark: The Upper can be inserted under the Guard

## Warnings



1. Don't disassemble the product by yourself.
2. Product is IPX7 waterproof, it can be put under the shower.



3. Product can be wiped or cleaned with wet cloth or neutral liquid soap.
4. Don't charge product in the environment above 104°F (40°C) or below 32°F (0°C).

\*Product will be a little hot while charging, which is normal.  
\*Please remove the battery from product and put in specified recycle place after battery life is ended.

### Environment-friendly & Recycle

Please remove the battery from product when you decide to abandon product, and put battery in specified recycle place.

1. Let the product work until the battery is empty.
2. Turn off the product before disassembling the power, then remove battery from product.
3. Don't let USB cord connect with product.

## Blade cleaning & maintenance

### Pre cutting



1 Clean blade with cleaning brush



2 Blade can be dismantled for cleaning



3 When using trimmer head adjust up to increase the air for spray cutting and fuel tank

### After cutting



For little bit of increasing air on left, middle and right of cleaning brush before or after using the vibrator for maintenance. Please buy additional oil fuel your fuel price as it is not included in the package, sorry for inconvenience.

## Common problems

Common problem	Reason	Approach
Charging indicator does not light up	Motor common problem	Check the charging cable connection and the charging cable's condition
	Display light damage	Turn up the charger volume and look at the indicator with a flashlight. Consider if you need repair or just send it to the manufacturer
	Low battery level and too short time Charging instruction	Activate charging if it does not start after about a few minutes. That means you normally place near the USB power source
Indicator lighting	Not charging with original charging cable	Use original one for charging
	Battery too low	Recharge after some time before use
	The charging indicator lights will avoid to fully charged	Recharge after some time before use
Non-serial re-writing	Low battery	Connect to charging cable to charge
	Short cable	Recharge after some time before use
	Overheated	It is not to continuously use it to alter data re-writing
Eject fail	Lower power than authorized	Connect to charging cable to charge
	Inappropriate direction of the drawer head	According to the indicator mark at the side of the drawer head
	Inappropriate block	Remove the drawer head, and manually insert the drawer and confirm the indicator to stop to lit volume. The drawer can be pulled beyond completely the front to fully confirm connection with the drawer system
Load failure	The drawer loading not finished enough	According to the indicator mark at the side of the drawer head
	The drawer handle is stronger with fail	Check the hole on the drawer head carefully

## Haircut

### 3. Haircut

a Select the appropriate trim used to finish, open the switch, move the back of the hair clip along the hair, and trim the hair to the appropriate length.

\* Do not use the hair clipper to remove to avoid overtrimming (Figure 15).

\* Do not stay in one place while trimming, keep moving slowly (Figure 16).

a Trimming without trim comb



\* When there is no trim comb, the remaining length of the trimmed hair is about 1 mm. As shown in the figure, trim slowly with the hair following motion (Figure 17), alternating with sliding comb.

\* Take off the trim comb and rotate the trim comb adjustment back to make the hair not over the, then the hair can be trimmed and trimmed.

\* Adjust the amount of hair cut off (trim hair) to prevent excessive hair loss.

\* Trimming the length and making the design natural (Figure 18).

\* Good trimming, gently touching over the heavy hair part to make the overall hairstyle more and natural (Figure 19).

If the hair clipper does not start up immediately, the cause may be that the battery is exhausted. Please turn off the switch, and turn it up after a few minutes to use it normally.

When the internal battery works, do not overuse the battery, which will shorten the battery life.



## Guide comb function

GUIDE COMBS can meet all your different trim length requirements. The left and right combs can help you control the trimming orientation and make your hair more stylish.

1. Determine the hair length of your pet that needs to be shaved.
2. Select the appropriate guide comb.



1.5mm



3mm



6mm



12mm



Left comb



Right comb



### Select the guide comb

1. Give the clipper up to the top of the guide comb.
2. Slide the clipper into the slot of the guide comb.

### Take off the guide comb



1. Make sure you see the back of the clipper, then push up the guide comb with your thumb.

## Specifications

Professional Hot Glue	Motor	Operating Voltage: 1.7V
		Shaft Material: Abrasion resistant copper
	Battery	Battery Type: High performance eneloop
		Capacity: 1000mAh
		Charging Time: About 4-5 hours
Using Time after full charged: About 2hours		
Charging voltage: 2V/h		

## Charging method



1. Plug one end of the charging cable into the body charging hole and another end to the USB connector.
2. When the LED display turns round, it means it is charging. When the battery power has reached 99 that it means the battery is fully charged.

Please charge for about 4-5 hours when first use or if it has not been used for over half a year. (To revive the rechargeable battery)  
The charging time should not exceed 18 hours.